


# 60cm Ceran Touch Electric

## COOKTOP

PRODUCT CODE: **ECT600C4**

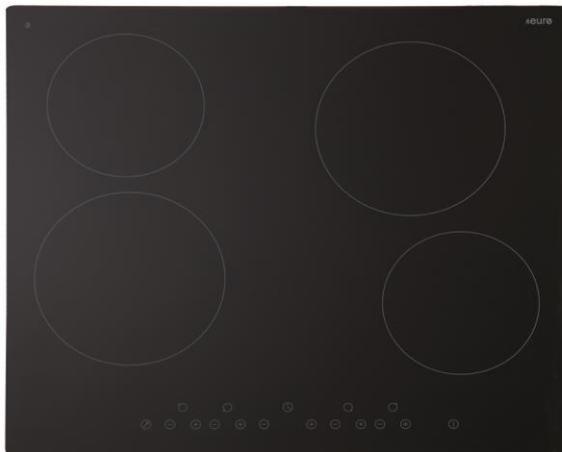

### FEATURE

- + Smooth Ceran glass electric cooktop
- + 4 heat elements
- + Overflow safety device
- + Front sensor touch control operation
- + Residual heat indicator
- + 9 power stage settings
- + 99 minute timer
- + Child lock
- + Square edge design

### SMOOTH CERAN GLASS COOKTOP

A high grade ceran glass is used for this cooktop to ensure easy cleaning of the smooth ceran surface.

### OVER-TEMPERATURE SAFETY DEVICE

To ensure safety whilst cooking, this electric cooktop is equipped with a safety system to monitor the temperature. When an excessive temperature is monitored, the cooktop will stop operation automatically.

### RESIDUAL HEAT INDICATOR

To ensure that you know which electric hotplate is in use the ECT600C4 is equipped with a heating level indicator. After cooking, there will be some residual heat remained, the letter "H" will appear to warn you to keep away from it till it cools down.

### 4 HEATING ELEMENTS AT 9 POWER SETTINGS

This ceramic cooktop is fitted with 4 elements to ensure they will provide different cooking zones and power settings to match with your cooking requirement.

### SENSOR TOUCH CONTROL

The ECT600C4 cooktop is equipped with a stylish touch sensor control panel, adding a touch of style and elegance to your kitchen.

### CHILD SAFETY LOCK

The child safety lock acts as protection to ensure that your desired temperature cannot be altered without unlocking the cooktop.

### SPECIFICATIONS:

<b>Electrical Requirements</b>	25 amp dedicated circuit from cooktop to main switchboard
<b>Voltage</b>	220V-240V
<b>Frequency</b>	50Hz - 60Hz
<b>Total Rated Load:</b>	6000W
<b>Heating Elements:</b>	
- Front Left Zone	1800W
- Rear Left Zone	1200W
- Rear Right Zone	1800W
- Front Right Zone	1200W
<b>Weight</b>	10.7kg (Gross) / 9.0kg (Net)
<b>Product Dimensions</b>	W590mm x D520mm
<b>Bar Code</b>	93477260000152




eurocooking

**3**  
YEARS

Warranty

### INSTALLATION DIAGRAM

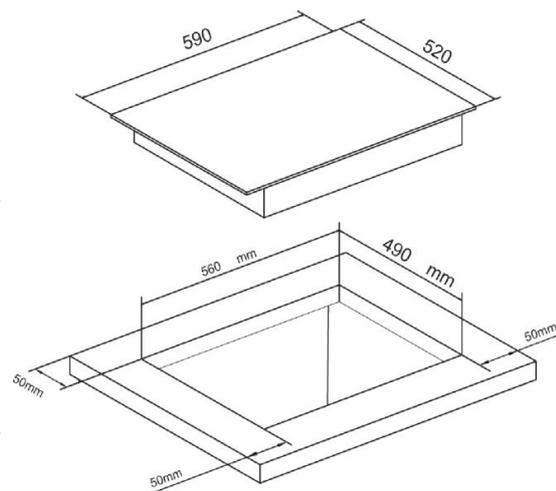

### CLEANING AND MAINTENANCE

- Cleaning operations must only be carried out when the appliance is completely cool.
- Clean the appliance regularly, preferably after each use
- Abrasive cleaners or sharp objects will damage the appliance surface; you should clean it using water and a little washing up liquid

### SAFETY INFORMATION

- The heating and cooking surfaces of the appliances become hot when in use, take all due precautions.
- Unstable pans should not be used on the appliances as they can cause an accident by tipping or spillage.
- Never leave the appliance unattended when cooking.
- Please refer to the manual for more information

**euroappliances**

EMBRACE QUALITY + PASSION

CUSTOMER SUPPORT TOLL-FREE **1800 440 335**

**DISCLAIMER:** Please note that the measurements and model appearances may change at any time. Euro Appliances reserves the right to change the specifications without notice.

[www.euroappliances.com.au](http://www.euroappliances.com.au)

cooking | laundry | refrigeration | alfresco