


INSTALLATION / MAINTENANCE INSTRUCTIONS UNIVERSAL POP UP BASIN WASTES TO SUIT NON-OVERFLOW AND OVERFLOW BASINS



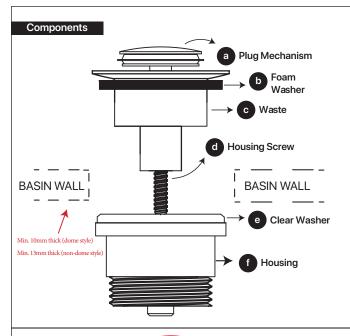


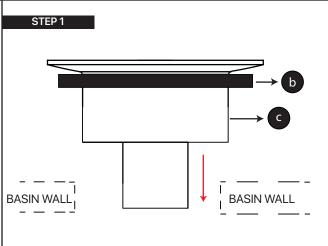


Thread Foam Washer (b) onto Waste (c) body and insert into basin hole.

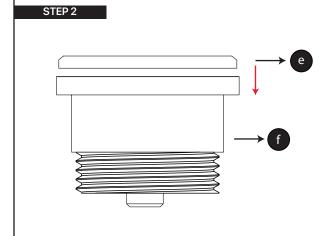


Insert Silicone Washer (e) into top of Housing (f).

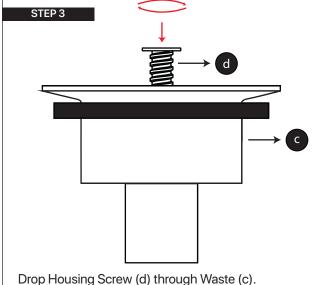

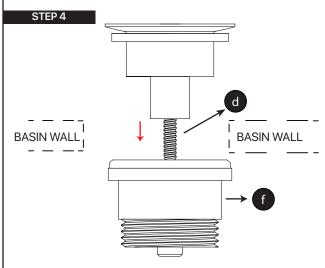

Locate Housing (f) underneath basin hole and screw in Housing Screw (d) from top and tighten firmly.

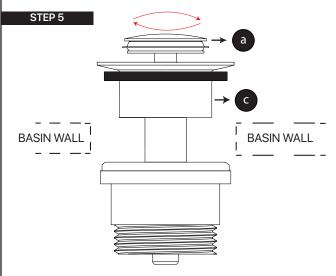

Screw Plug Mechanism (a) into Waste (c) and check for leaks.