


Caroma



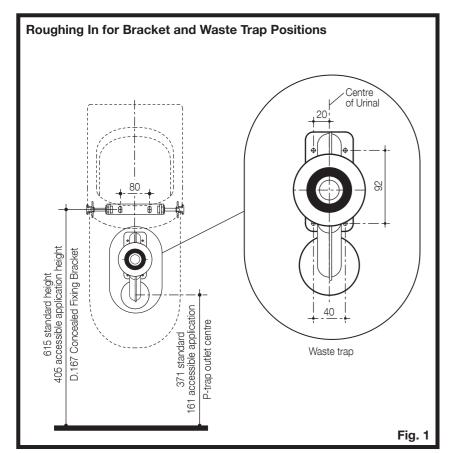

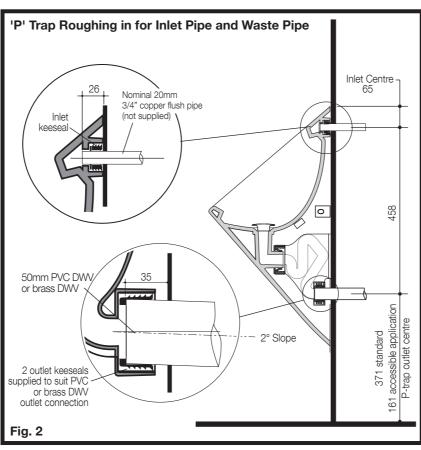

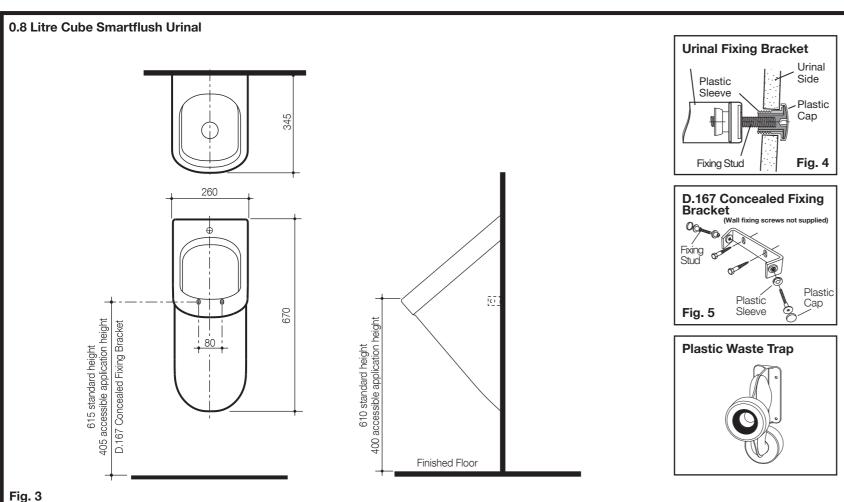

PLUMBERS INSTALLATION INSTRUCTIONS For Vitreous China 0.8 litre Cube Smartflush Urinal PLEASE READ CAREFULLY BEFORE INSTALLATION

ROUGHING IN FOR THE BRACKET AND TRAP POSITIONS

For timber stud walls the noggings and studs must be positioned at a height to allow for the location of the fasteners. The centre position is detailed in **Fig 1**.

ROUGHING IN FOR THE INLET PIPE AND WASTE PIPE

Accuracy is required between the two pipes as detailed in Fig. 2.

'P' TRAP URINAL INSTALLATION

- 1- Ensure the roughing in details have been confirmed on the wall as detailed in Fig. 1 & 2.
- 2- Fit the outlet keeseal over the waste pipe spigot protruding from the wall.
- 3- Gently push the urinal waste trap onto the keeseal using a soap solution lubricant.
- 4- Centre the waste trap in the vertical position and mark the four screw holes.
- 5- Secure the waste trap onto the wall using suitable fasteners.
- 6- Fix the Urinal Fixing Bracket into position as detailed Fig. 1.
- **7-** Fit the inlet keeseal on to the 3/4" pipe ensuring that the 3/4" pipe is aligned with the keeseal. (Use soap solution lubricant on the seals).
- 8- Push the urinal gently onto the 3/4" pipe while engaging the outlet into the waste trap seal.
- **9-** Secure the urinal onto the concealed bracket using plastic fixing sleeves into holes in the urinal, screw the two threaded studs into the bracket, as detailed in **Fig.4**. Tighten fixing heads with a 7/32" Allen key (not supplied) to mount urinal to wall while ensuring level.

IMPORTANT - DO NOT OVER TIGHTEN, AS THIS MAY CRACK THE URINAL SIDE. Snap on plastic cap, as detailed in Fig. 4.

10- Caulk with an acetic cured silicone sealant/caulking as required.

Note: The urinal must be installed in accordance with the AS/NZS 3500 Plumbing Requirements. Local Authorities have varying requirements.