


## Installation Instructions for 40mm Flexible Plumbdinger

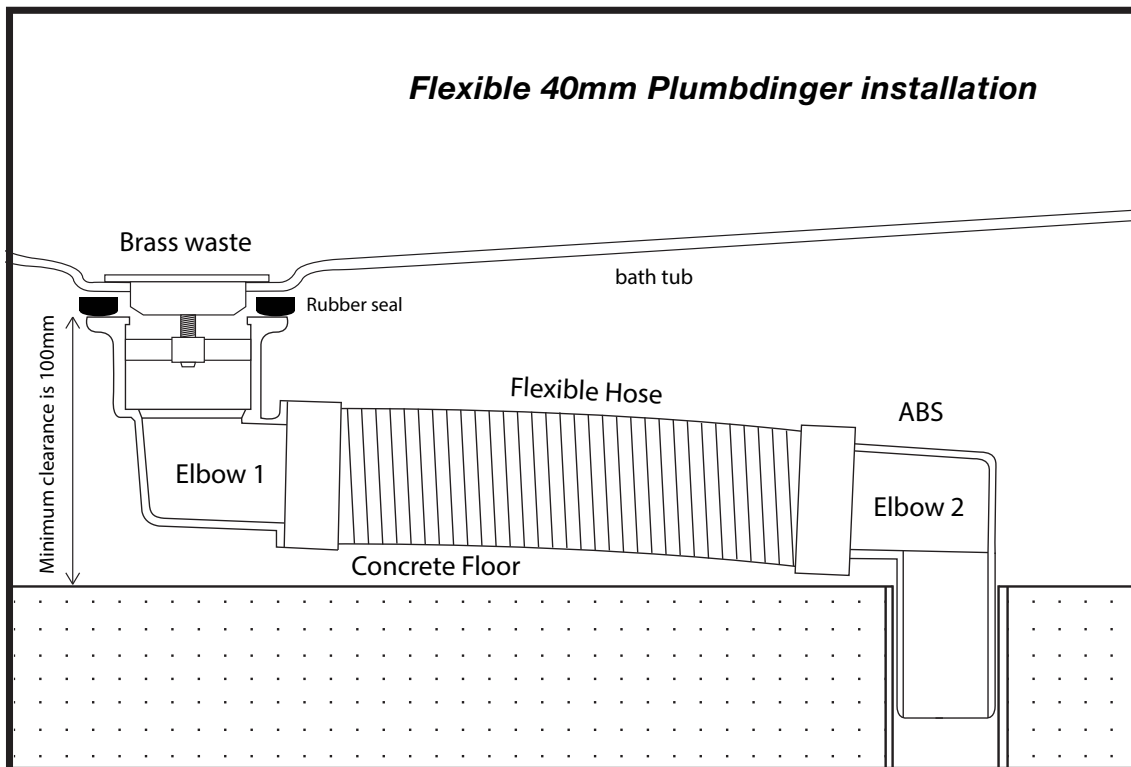

1. Cut flexible hose to size if required. Solvent weld elbow 1 & 2 to flexible hose.
2. Cut floor waste to suit desired fall, solvent weld elbow 2 in to floor waste pipe.
3. Connect elbow 1 to bath with rubber seal in place; apply a bead of approved sealant to internal topside surface of bath and insert grate. Firmly tighten screw using hand tool only (no power tools).
4. Test to AS3500
5. Use only cleaners and solvent cements approved by Australian Standards.
6. It is recommended that the Flexible waste pipe should not be bent tighter than 4 times the diameter.