# Caroma®

## Cube Undercounter Ceramic Vanity Basin

200mm 100mm 0

Scale

100mm

200mm

Ø20mm Hole

**IMPORTANT**
Use only acetic cured silicone sealant/caulking.
**Epoxy type glues must not be used.**

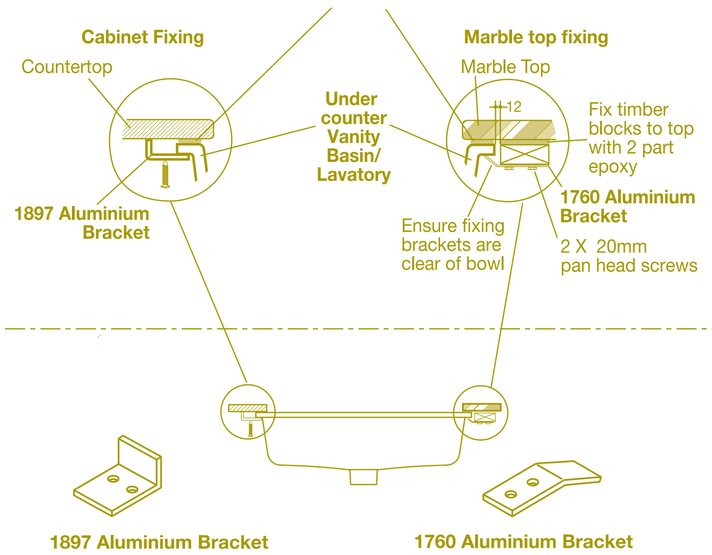


**Cut-Out Size**
**450 x 274**

Ø20mm Hole

Ø20mm Hole

**Plumbers Installation Instructions**

The basin can be installed under conventional laminated timber or marble counter tops.

**1-** Position template over countertop.

**2-** Attach template cut-out guide to the countertop with adhesive tape or otherwise transfer cut-out line to the countertop.

**3-** Suggested start position for jigsaw is a Ø20mm hole as shown. Cut out countertop with care.

**4-** Clean underside of the sealing rim and fitting face of basin/lavatory that comes into contact with the countertop to ensure both are free of dust, dirt and grease.
Apply a layer of acetic cured silicone sealant/caulking around the sealing rim and fitting face of the basin/lavatory.
**Important: do not use epoxy sealants.**

**5- Important: four wooden blocks should be permanently pre-fitted to marble or conventional laminated timber tops before fixing the basin/lavatory with the 1760 clips.**
See fixing details opposite.
Screw fix to the underside of the countertop, using four 1760 under counter clips evenly spaced around the basin/lavatory. Optional 1897 brackets are available for conventional laminated timber tops (not supplied).

**6-** Connect plumbing.

Installation must be in accordance with AS/NZS 3500.2

**Note: The 1897 fixing clips are not supplied with this basin/lavatory and must be purchased separately.**

**Cut-out template**

**Basin Rim**

Ø20mm Hole

**999725CIL**

Issue No. 4
14.06.23